

FLEXIBLE LIGHTER

⚠ IMPORTANT SAFETY INFORMATION

THIS PRODUCT USES EXTREMELY FLAMMABLE GAS AND IS VERY DANGEROUS IF NOT USED CORRECTLY. PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP THEM FOR FUTURE REFERENCE.


IGNITION

- Slide the Flame Adjustment switch to the right for maximum gas.
- Slide the Safety Lock to the right to unlock.
- Press and hold the Ignition Trigger to ignite the gas. The flame will remain on until the Ignition Trigger is released.
- Adjust the flame as required using the Flame Adjustment wheel.

CAUTION: the tip may become very hot. Keep young children away from the torch.

AFTER USE

- Slide the Safety Lock to the left to lock the torch.

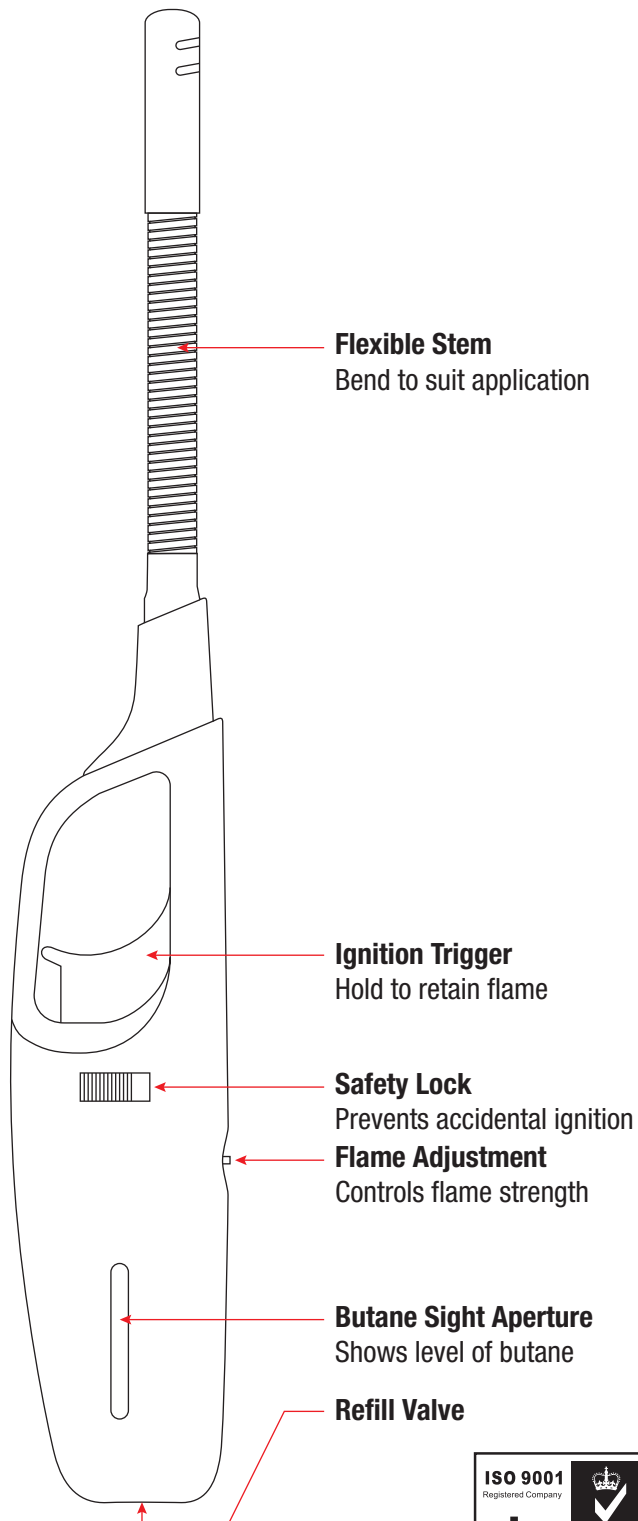

KEEP THESE INSTRUCTIONS