

Model: PAPT-MK (for Propane or Super-MAP Gas)

ALUMINIUM PISTOL GRIP TORCH KIT

OPERATION AND LIGHTING

- 1. Use only high quality Propane or Super-MAP gas.
- Before installing the torch to the gas cylinder, make sure the Flame Control Valve is OFF by turning in clockwise direction until hand tight only. DO NOT FORCE
- Hold torch and gas cylinder upright. Turn the gas cylinder counter-clockwise into the torch valve body until hand tight and attached securely to the torch connector. Check connection for leaks.
- 4. Turn the Flame Control Valve counter-clockwise fully for ignition. At this stage, the gas has not been released yet.
- 5. Slide the Safety Lock to the UNLOCK position.
- Squeeze the Ignition Trigger slowly allowing gas to flow into the burner tube. Continue to squeeze it until the torch is lit. If the torch doesn't light, squeeze the Ignition Trigger again.

FLAME ADJUSTMENT

- 1. Turn the Flame Control Valve to control the gas output as required.
- The maximum heat zone is very concentrated. It's located between 10-25mm from the end of the tip. Holding the torch too close or too far away from the target can reduce the heating effect.

COLD WEATHER OPERATION

In cold weather, the size of the flame can be smaller due to lower gas pressure. To produce a larger flame, pre-warm the gas cylinder to room temperature prior to use. Shaking the gas cylinder a few times to warm the fuel up will help. There is a possibility that the flame will extinguish when the torch is turned upside down in cold weather.


SHUTDOWN AND STORAGE

- Release the Ignition Trigger to extinguish the flame. If the Flame Locking Button lock is ON, pull the Ignition Trigger fully inward to release the lock.
- Turn the Flame Control Valve OFF. Note: The flame may continue to burn for a short period of time if the torch has been operated in an inverted (upside down) position.
- When torch is cool, turn the gas cylinder clockwise to disconnect it. Slightly pull the Ignition Trigger to vent the remaining gas inside the torch.
- 4. Slide the Safety Lock to the LOCK position.
- Store the torch and gas cylinder separately. Read other cautions on gas cylinder label.

GENERAL SAFETY RULES

- Do not use this torch until you have understood all of the operation instructions and cautions and familiarise yourself with the torch before you use it. Review instruction and cautions. Deviating from these procedures may result in fire, explosion, property damage and/or operator injury. Do not try to operate before reading instructions.
- The use of other than Propane or Super-MAP gas with this torch may cause a fire or explosion.
- Wait for the torch to cool down before tightening or removing torch head and before installing or removing accessories.
- Do not point torch towards face, other persons or flammable objects. Never attempt to use torch as a cigarette lighter.
- Disconnect gas cylinder when not in use. Never store with torch attached to the gas cylinder.
- Do not attach or detach the torch from the cylinder where accidentally released gas might be ignited by open flames.
- 7. Never attempt to modify the torch construction and never use unapproved
- Treat the torch as you would any fine tool or instrument. DO NOT use the torch until you have corrected any problems. Torches improperly operated, maintained or repaired can be dangerous. Improper use, service repair or modification of the torch could result in damage to the
- product, property damage or personal injury to the operator.

 9. Do not use a leaking, damaged or malfunctioning torch.
- 10. Work only in well-ventilated areas.
- Always place your work on firebrick. Ordinary brick and concrete can explode when subjected to high temperatures. Do not work on wood or metal surfaces. Always shield your work.

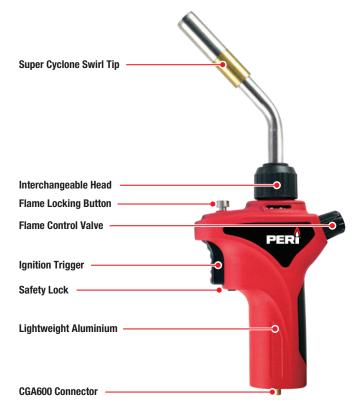

- Always wear protective glasses and gloves. Use proper tools to handle hot work.
- 13. Be aware that the tip of the torch can get extremely hot during use. Be especially careful around motor vehicles or any gasoline-powered products and beware of hidden fuel lines and tanks.
- 14. Always make certain the torch is placed on a level surface when connected to the gas cylinder to reduce the risk of accidental tip over. Be sure torch is not pointed in a direction which could cause nearby objects to be burned when torch is set down.
- When thawing pipes, be very careful not to overheat surrounding materials.
- 16. Always have a fire extinguisher and a bucket of water near the torch and work area. Do not place them in the flame path or in a location where you could not reach them should a fire break out.

WARNING

EXTREMELY FLAMMABLE! CONTENTS UNDER PRESSURE!

- Keep out of reach of children.
- Keep away from heat or flame.
- It is illegal and dangerous to refill the cylinder. Obtain new gas cylinder from your dealer.
- Avoid prolonged exposure to sunlight.
- Do not store near heat or in a room used for habitation.
- Always close the Flame Control Valve and wait at least 30 seconds before removing torch from gas cylinder.
- Always detach gas cylinder from torch when not in use.
- Do not breath gas, fumes, vapour or spray.
- If inhaled, remove affected person to fresh air.
- When gas cylinder is empty, discard in a safe place. Do not throw in fire.
- Do not puncture or incinerate container.

KEEP THESE INSTRUCTIONS